


FIBI-STYLE Hobostove

Instructions

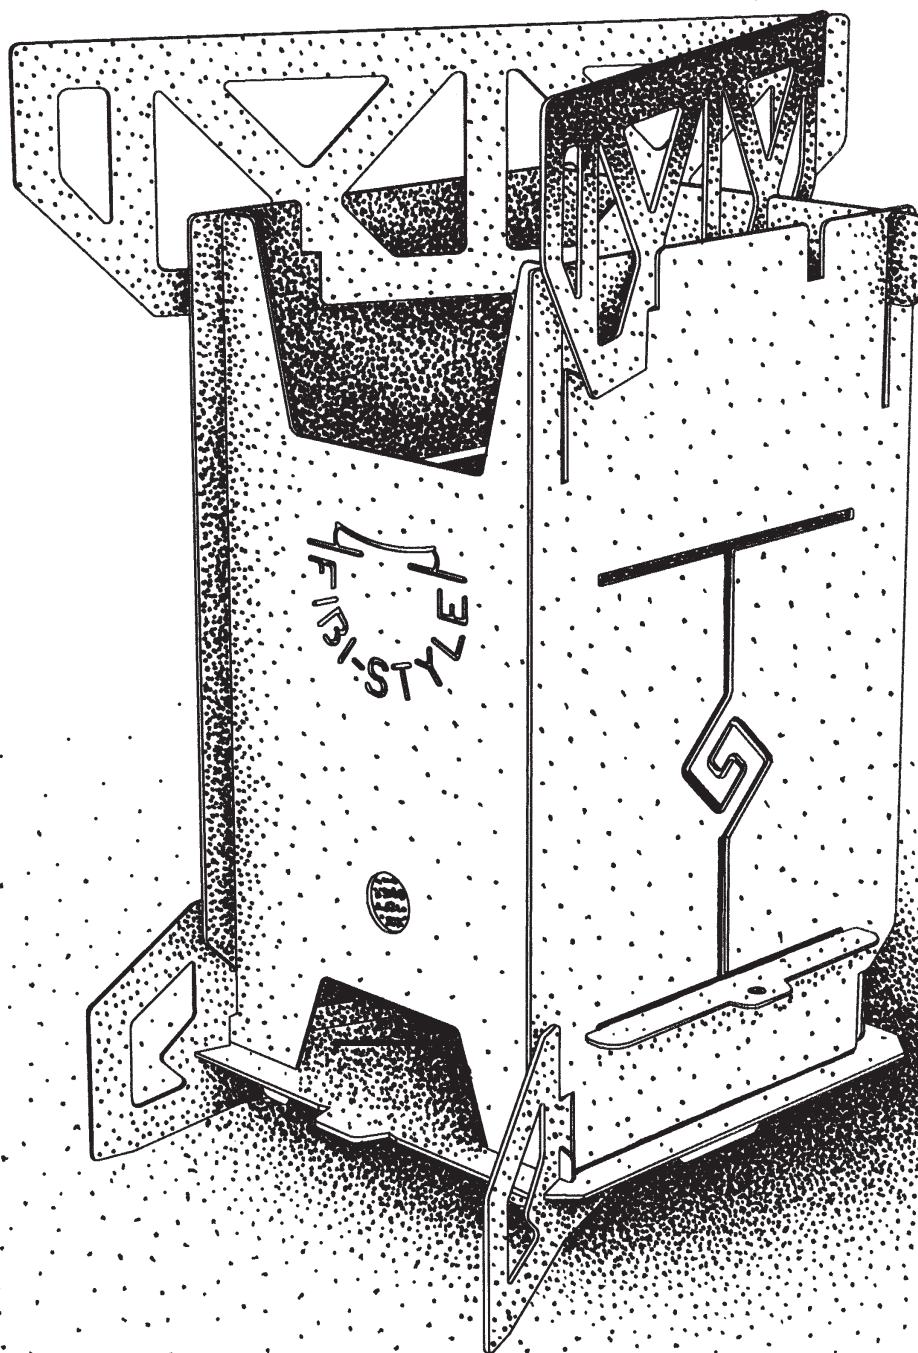


The FIBI-HOBOSTOVE is lightweight and compact, and with just a small amount of wood it produces an intense heat. Made in Switzerland.

FIBI-STYLE Eichbergstrasse 6 CH-5704 Egliwil
www.fibistyle.ch mail@fibistyle.ch

Assembly

1. Slot the two base pieces together and then add the baseplate.
2. Add the front and back pieces to the baseplate.
3. Insert the sidewalls, starting at the top and finishing at the baseplate.
4. Slide in the fire grate, it joins the baseplate and the sidewalls together.
5. Finish by adding the pot supports to the top of the stove.

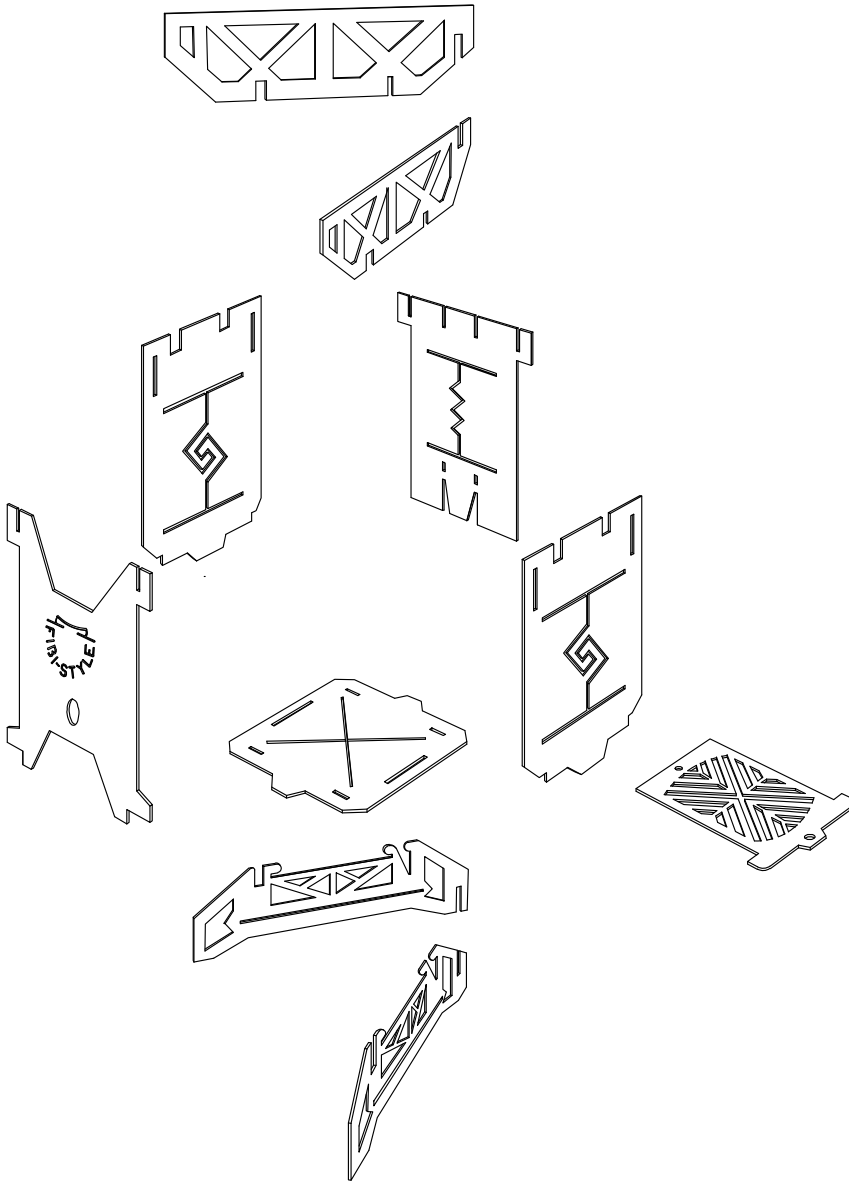

Using a spirit burner

To use a spirit burner (e.g. Trangia), slide the fire grate into the upper slots.

Warning: when the fire grate is in the upper position, it does not secure the baseplate to the sidewalls.

DIY fan

To further improve performance, blow air through the opening at the front of the stove with a blowpipe or a fan.

Technical specifications

Disassembled: 12 x 19.3 cm; Fire-box: 10 x 10 x 15.3 cm; wood length 10-20 cm; 980 g; stainless steel 1 mm

How to use the FIBI-HOBOSTOVE

Begin with a fire-starter and a few dry twigs. Feed the fire with twigs that are as thick as your finger and as long as your hand. Leather gloves and a small camp saw are always useful when cooking on a fire or using FIBI-HOBOSTOVE.

Safety

Only use your FIBI-HOBOSTOVE outside, be sure to place it on a non-flammable surface and never leave a burning stove unattended. If it is windy, use a windshield to prevent sparks from being blown around or away.

